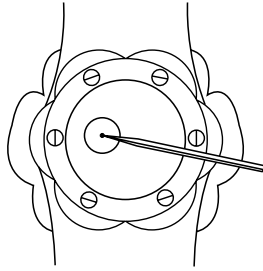

CAMÉLIA
CHANEL

USER GUIDE
ENGLISH

ADJUSTING THE TIME

Quartz watches without crowns

Adjusting the time on these watches requires the use of a special tool found in the bottom of the box. Simply use this tool to press the button on the back of the watch case (see illustration).



1/ Adjusting the hour

The hour is adjusted by 2- to 4-second taps on the button. Both hands advance at the same time: the hour hand makes a rotation of one hour, and the minute hand makes a rotation of 60 minutes. When changing time zones, this feature makes it easier to adjust the watch.

By pressing longer (continuously for over 4 seconds) on the button, the two hands advance simultaneously and much more rapidly.

2/ Adjusting the minutes

Once the hour has been adjusted, the minutes can be adjusted in a series of taps (less than 2 seconds). Each press advances the hand by one minute.

Note

Pressing on the corrector advances the hour and minutes hands. It is not possible to go backwards.
