
THE MONSIEUR DE CHANEL WATCH

USER GUIDE
ENGLISH

THE MONSIEUR DE CHANEL WATCH

ADJUSTING THE TIME

Setting the time

The crown (C) is ordinarily placed in position 1. Carefully pull the crown to position 2 (one notch). Then turn it to move the minute hand to indicate 60 minutes. When the hand automatically returns to 0 minutes the hour disk advances by one hour. Repeat the operation until the chosen hour and minute are indicated. Do not forget to push the crown back fully to its original position.



- A - Hour window
- B - Minute hand
- C - Crown

MANUAL WINDING

The MONSIEUR DE CHANEL watch is equipped with a mechanical movement and requires a manual wind to tighten up the main spring that operates the movement. This is carried out by winding the crown (in position 1) in a clockwise direction until resistance is felt, which indicates that the movement is completely wound up (approximately 70 complete turns of the crown). It is important never to force winding past the full reserve.

The watch has a 72 hour power reserve. Beyond this autonomous period, manual winding becomes necessary. To guarantee your watch's accuracy, we recommend winding the movement daily (approximately 24 complete turns of the crown).
