
1932
COLLECTION
CHANEL

USER GUIDE
ENGLISH

1932 WATCH COLLECTION

ADJUSTING THE TIME

Crown C is normally placed in position 1.

Pull the crown out one notch (position 2), turn to move the hands to the desired time. Remember to push the crown back fully to return it to its original position.



A - Hours hand
B - Minutes hand
C - Crown
