
CHOCOLAT
COLLECTION
CHANEL

USER GUIDE
ENGLISH


ADJUSTING THE TIME

To adjust the Chocolat watch, it is necessary to use the special adjusting tool. This can be found in the bottom of the box. It is very simple to use - it presses in the adjustment button on the back of the watch case (see picture).


1/Adjusting Hour display: The Hour display is adjusted by pressing the button and holding it in. The display first runs through the sixty minute settings, one by one. When that stops, the Hour display starts to change, advancing at a rate of one figure per second. Keep the button pressed in until the required Hour appears.

2/Adjusting Minutes display: Once the Hour display has been adjusted, the Minutes display can be adjusted by a series of short presses on the button. Each press advances the Minutes display by one figure. If you press the button and hold it in, the Minutes display will advance more quickly, at a rate of 10 figures per second. You are therefore advised to release the button before the display gets to the figure you require and then use a series of short presses to get to the correct time.

Notes: Pressing the adjustment button can only make the Hours and Minutes display advance (i.e., the figures will increase). It is not possible to work back through the figures (i.e., get them to decrease). Therefore, to adjust a watch that is one minute fast, it is necessary to advance the display through twenty-three hours and fifty-nine minutes. The battery in your Chocolat watch should last three years. When it wears out, the figures on the digital display will start to flash. Batteries can be changed at any CHANEL sales outlet, or any accredited CHANEL distributor.

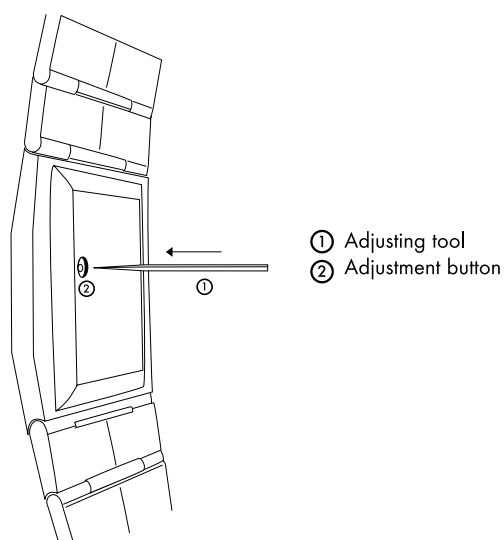

HANDLING OF THE CLASPS

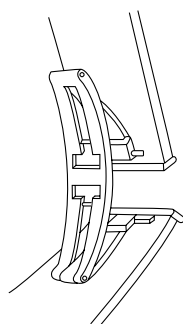

Triple deployant buckle
