
MATELASSÉE
COLLECTION
CHANEL

USER GUIDE
ENGLISH

MATELASSÉE WATCH COLLECTION


ADJUSTING THE TIME

Crown C is normally placed in position 1.
Pull the crown out one notch (position 2), turn to move the hands to the desired time.
Remember to push the crown back fully to return it to its original position.



A - Hours hand
B - Minutes hand
C - Crown

HANDLING OF THE CLASPS

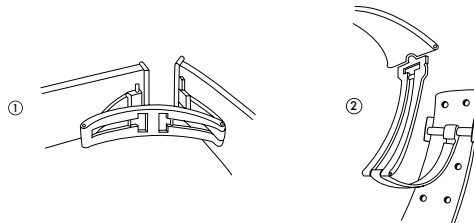

1. Triple deployant buckle.
2. Double deployant buckle.
Adjust size by moving the buckle along the clasp.
